


## Peel & Stick Wall Mural Installation Instructions

---

### Recommended tools:

- Spirit level
- Measuring tool
- Pencil
- Utility knife
- Trim guide
- Squeegee

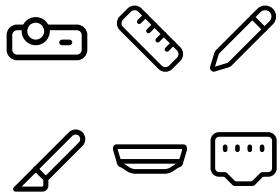

The panels are numbered in the order they should be hung.

Install the panels from left to right and edge to edge.

**Allow the wallpaper to lay flat for 48 hours to acclimatize, ensuring optimal adhesion.**

---

See our instruction video by scanning the QR code below!



### Preparation:

#### 1. Make sure the surface is smooth and clean

Remove any old paint or wallpaper that is coming off. Clean the surface and apply filler where necessary. Wipe off any dust with water and gentle cleaner and let the surface dry completely, dust may interfere with the wallpaper's ability to stick to the wall. If the surface is porous, it should be primed before hanging the wall mural.

Porous surfaces include skimmed walls, walls with old wallpaper, particle board or similar. You should also prime the surface if it has bright colors that could show through the wall mural. Make sure to allow time for the paint to cure properly before attaching the wallpaper to the wall

#### 2. Cut the individual panels

Unroll the wallpaper and cut into individual panels following the dotted lines.

#### 3. Leave the panels flat for 48 hours

To achieve the best results, leave the wallpaper laying flat in the installation space for 48 hours. This helps ensure proper adhesion on the walls.

### Hanging:

#### 1. Check the wall mural

Before hanging, make sure no panels are missing and none have any defects or damage. The panels are numbered at the top in the order they should be hung. Hang from left to right.

#### 2. Make sure the panels are hung straight

It is vital that the first panel is hung straight. It is a good idea to draw vertical markings one panel width (17.72 inches) in from the corner using a spirit level, a measuring tool and a pencil. Use the markings as a guide to hang the first panel. Make sure the markings are faint so they don't show through the wall mural.

#### 3. Prepare the first panel

Remove the protective backing from panel number one, peel it approximately 1/3 from the top.

#### 4. Position and attach the panel on the wall

Attach the first panel to the wall, aligning it with the vertical mark. If it's not quite right you can carefully remove the panel and re-position it. Remove more of the protective backing while attaching and smoothing out the panel from right to left and downward to the floor.

*Note: Allow the material to stick as it falls – avoid stretching and pulling it as this could distort the shape.*

#### 5. Hang the panels edge to edge

Hang the second panel and make sure to align the pattern, from panel number one smooth out the panel from left to right to make sure to line up the pattern. Again, allow the material to stick as it falls and avoid stretching and pulling.

#### 6. Smooth down the panels from the ceiling to the floor

Use the rubber scraper to carefully smooth out any air bubbles, starting from the middle and smoothening out towards the edge and downward.

#### 7. Trim off any excess paper

Once all the panels have been installed, trim off any excess paper using a trim guide and a utility knife.

#### 8. Sit back and enjoy your new room!

Additional air bubbles might occur after the installation. If so, use a thin needle and carefully press it through the paper by the edge of the bubble, use the rubber scraper to gently press out the air through the tiny hole, attaching the wallpaper to the wall.

### Disposal:

**Protective back-side:** should be recycled as paper.

**Wallpaper:** should be disposed of as combustible waste.

*Please note that recycling possibilities and systems may vary based on your location.*

*For accurate guidance and detailed information, we recommend consulting your local authorities and services.*