


## Interior Matte Paint

### Painting Guide

---

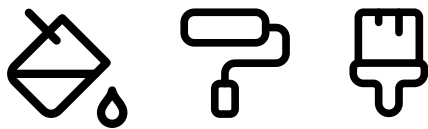

#### Recommended tools:

- Roller
- Tray
- Paint brush
- Masking tape
- Protective cover for floor and furniture

#### Preparation:

Make sure the surface is smooth and clean. Remove any old paint or wallpaper that is coming off. Clean the surface and apply filler where necessary. If the surface is porous, apply a primer. Porous surfaces include skimmed walls, walls with old wallpaper, particle board or similar.

Cover floors and furniture with protective plastic. Use masking tape to cover and protect door trims, ceiling and other areas.

Open the can and stir the paint slowly and firmly all the way from the bottom of the can.

#### Paint the surface:

Start to paint the area in the ceiling and corners with a large paint brush. Soak the roller in paint in the deep end of the tray, then roll the roller at the sloping part of the tray to evenly distribute the paint. The roller should be soaked in paint without dripping. Apply the paint by rolling the roller from ceiling to floor in even strokes. Add more paint to the roller when needed.

Let the paint dry for 4 hrs, then paint a second layer the same way. Place plastic bags over the roller, tray and brush while the paint is drying so they can be used again.

The dry time for the paint is 1h tack-free, 4h paintable, 24h dry.

#### After painting:

Once you've finished the second coat, carefully remove the masking tape while the paint is still wet. Wipe the tools carefully before cleaning them in water. If you have left over paint, you can either save it in the can for later use, or take it to your local recycling center.

#### Care:

Use a damp cloth with mild cleaning products to wipe clean the surface (don't use alcohol). Black scratch marks are best removed with a rubber razor.

Perfectly painted by you - for a Photowall finish.

